

-AP - 400 Universal Repeaters -

1. Disable internal WiFi Card > Control Panel > Network Connections > Wireless connection > Right Click > Disable

2. Log into AP400 - When logging into the AP400 you will want to have a Static IP on your PCs LAN connection > Control Panel > Network Connections > LAN connection > Properties > Internet Protocol Properties > Use following IP Address-192.168.1.10, Subnet mask 255.255.255.0 or any 192.168.1.x up to 248 or so but not the IP of the device (AP400 IP Address - 192.168.1.1) .

You will most likely just leave it since you don't use the LAN for anything else. If you want to connect through LAN you will need to set back to automatically obtain IP Address.

3. Once logged into AP400 - admin for user name and password > Wireless > Basic Settings > Uncheck Universal Repeat Mode (if checked) > Site Survey > Refresh > Connect to desired AP > Basic Settings > Check Universal Repeat Mode and name extended interface.

4. Enable Internal WiFi Card - Same as step 1 > scan for extended interface (repeater) connect and surf -