

1. Disable internal WiFi Card > Control Panel > Network Connections > Wireless connection > Right Click > Disable

Log in - Log into AP400 - When logging into the AP400 you will want to have a Static IP on your PCs LAN connection> Control Panel > Network Connections> LAN connection>Properties> Internet Protocol Properties> Use following IP Address-192.168.1.10, Subnet mask 255.255.255.0 or any 192.168.1.x up to 248 or so but not the IP of the device (AP400 IP Address - 192.168.1.1 default in AP mode 192.168.1.2)

Username and password is admin

Modem side - wireless >Mode AP (this will change IP to 192.168.1.2) log in with that IP > WDS settings > Enable WDS > Enter LAN MAC Address from client/bridge (opposite unit) side in WDS Settings - > set channel same on both units >

Set Security and apply changes -

Bridge Side - Log in Set as AP Mode >WDS enable > change IP to 192.168.1.3 > Enter - LAN MAC address of modem side unit > Set Security same > apply changes > same channel as AP